

### Recording

#### Connection Diagram

#### Recording Procedure

- Slide the POWER switch to turn on.
- Push the REC button to begin recording.
 

The Rec indicator will be lit and steady while recording. The display will show the information display of recording. (page 40)
- Push the REC PAUSE button to pause recording.
- Push the STOP button to stop recording and end the track (close the audio file).
 

The display will show the information display of stop.

#### Audio inputs for recording

Audio inputs for recording are selected using the Input Menu.

Channel - Stereo	
Display	Input Menu
MIC	Internal Mic Recording (Stereo, L/R ch)
MIC	External Mic Recording (Stereo, L/R ch)
LINE	LINE Recording (Stereo, L/R ch)

Channel - Mono	
Display	Input Menu
MIC	Internal Mic Recording (Mono, L ch)
MIC	External Mic Recording (Mono, L ch)
LINE	LINE Recording (Mono, L ch)

Setup the "Input" (page 44) and "RecChannel" (page 46) of the preset menu.

#### Recording Level Control

The recording level control lets you select the type of input level control.

- At Manual, you control the input level with the REC LEVEL controls.
- The inside control (Right Channel) and outside control (Left Channel) turn together unless you hold one while turning the other.
- The optimum record level is when the level meter goes as close to 0dB as possible but does not go OVER.
- At ALC (Automatic Level Control), the PMD660 automatically responds to changes in input level.
- At ALC+Manual, ALC is selected and fine tuning of the recording level is enabled.

#### QR Code downloads Marantz manual

### Playback Procedure

- Slide the POWER switch to ON.
- Push the PLAY/PAUSE button to begin playback.
 

The PLAY indicator will be lit and steady while in playback.
- Push the PLAY/PAUSE button again to pause playback.
- Push the STOP button to stop playback.

### Track Access

- TRACK JUMP ◀◀**  
During playback, push to jump to the previous track. If pushed while playing the first track, it jumps to the last track on the CF card.
- TRACK JUMP ▶▶**  
During playback, push to jump to the next track. If pushed while playing the last track, it jumps to the first track on the CF card.

### Search

- ◀◀** During play - pause, push and hold the ◀◀ button to rewind quickly. The rewind is at 10X speed for three seconds, then it automatically speeds up to 140X speed.
- ▶▶** During play - pause, push and hold the ▶▶ button to fast forward quickly. The fast forward is at 10X speed for three seconds, then it automatically speeds up to 140X speed.

### Notes:

- If the ▶▶ button is held past the end of a track, the fast forward will continue into the next track.
- If the ◀◀ button is held past the beginning of a track, the rewind will continue into the previous track.

### Changing Presets and Input/Output

- Press the "Menu/Store" or "Edit" Button
- Press the "Mark-" and the "Mark+" to switch between presets
- Hit "Enter" or "Play/Pause" Button to choose desired preset
- Use respective "Mark" buttons to choose Input or Output
- Press "Enter" then the "Mark" keys to choose your desired mode of Input/Output
- Press the "Edit" button to finish.

### How to connect via the USB port

The CF card in the PMD660 appears as an external drive on a connected computer.

- Connect the cable to the PMD660 and your computer.
- From power off, push and hold the COPY/USB button while turning on the PMD660's POWER switch. "USB" is displayed.

USB