

Shotgun Mic with Canon Vixia G20 (No Camera Accessory Mount)

Items Seen:

- 1) Shotgun Mic w/ Wind Screen
- 2) Cold Shoe Adapter
- 3) Microphone Clip
- 4) Canon Vixia G20

Step 1: Gather parts.

Step 2: Attach cold shoe adapter to top of Vixia.

Step 3: Attach and screw on microphone clip.

Step 4: Clasp microphone in microphone clip and plug in cable to "MIC" port on camera.

Shotgun Mic with Canon Vixia G20 and Accessory Mount

Items Seen:

- 1) Canon Vixia G20
- 2) Camera accessory mount
- 3) Shotgun mic mount
- 4) Shotgun mic w/ wind screen

 
Steps:

- 1: Attach camera accessory mount to camera (may be different with different camera models)
- 2: Attach shotgun mic mount to camera accessory mount
- 3: Clip in shotgun mic to the mount


Note: Accessory mount grip will face backwards with this setup.
If placed on opposite side the mount will block the fold-out screen on the camera.



STEP 1

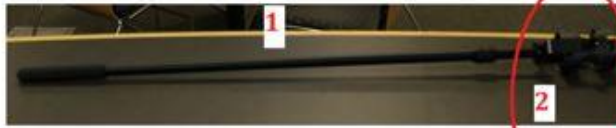

 STEP 2

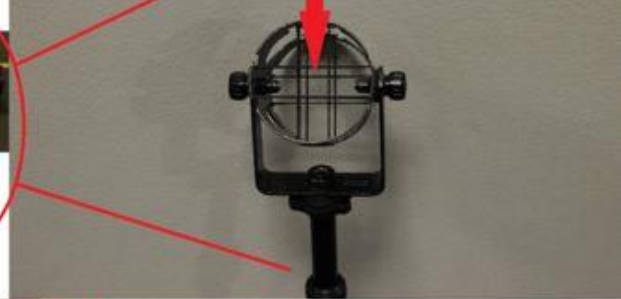

STEP 3



STEP 4



Note: Audio extension cable is wrapped around boom mic pole

Shotgun Mic with Boom Mic Pole

Items Seen:

- 1) Boom mic pole
- 2) Boom mic head
- 3) Shotgun mic
- 4) Audio extension cable

Steps:

- 1: Make sure that boom mic pole and boom mic head are assembled.
- 2: Make sure that the boom mic head has all 4 rubber bands present.
- 3: Insert shotgun mic into center of boom mic head rubber bands, ensuring that the mic will not move once placed.
- 4: If using the audio extension cable (included with the boom mic pole), be sure to wrap excess cord around the boom mic to prevent tangling or tripping.